




# HTC Flyer MicroUSB Port Replacement

Removing the power jack for replacement.

Written By: Joshua

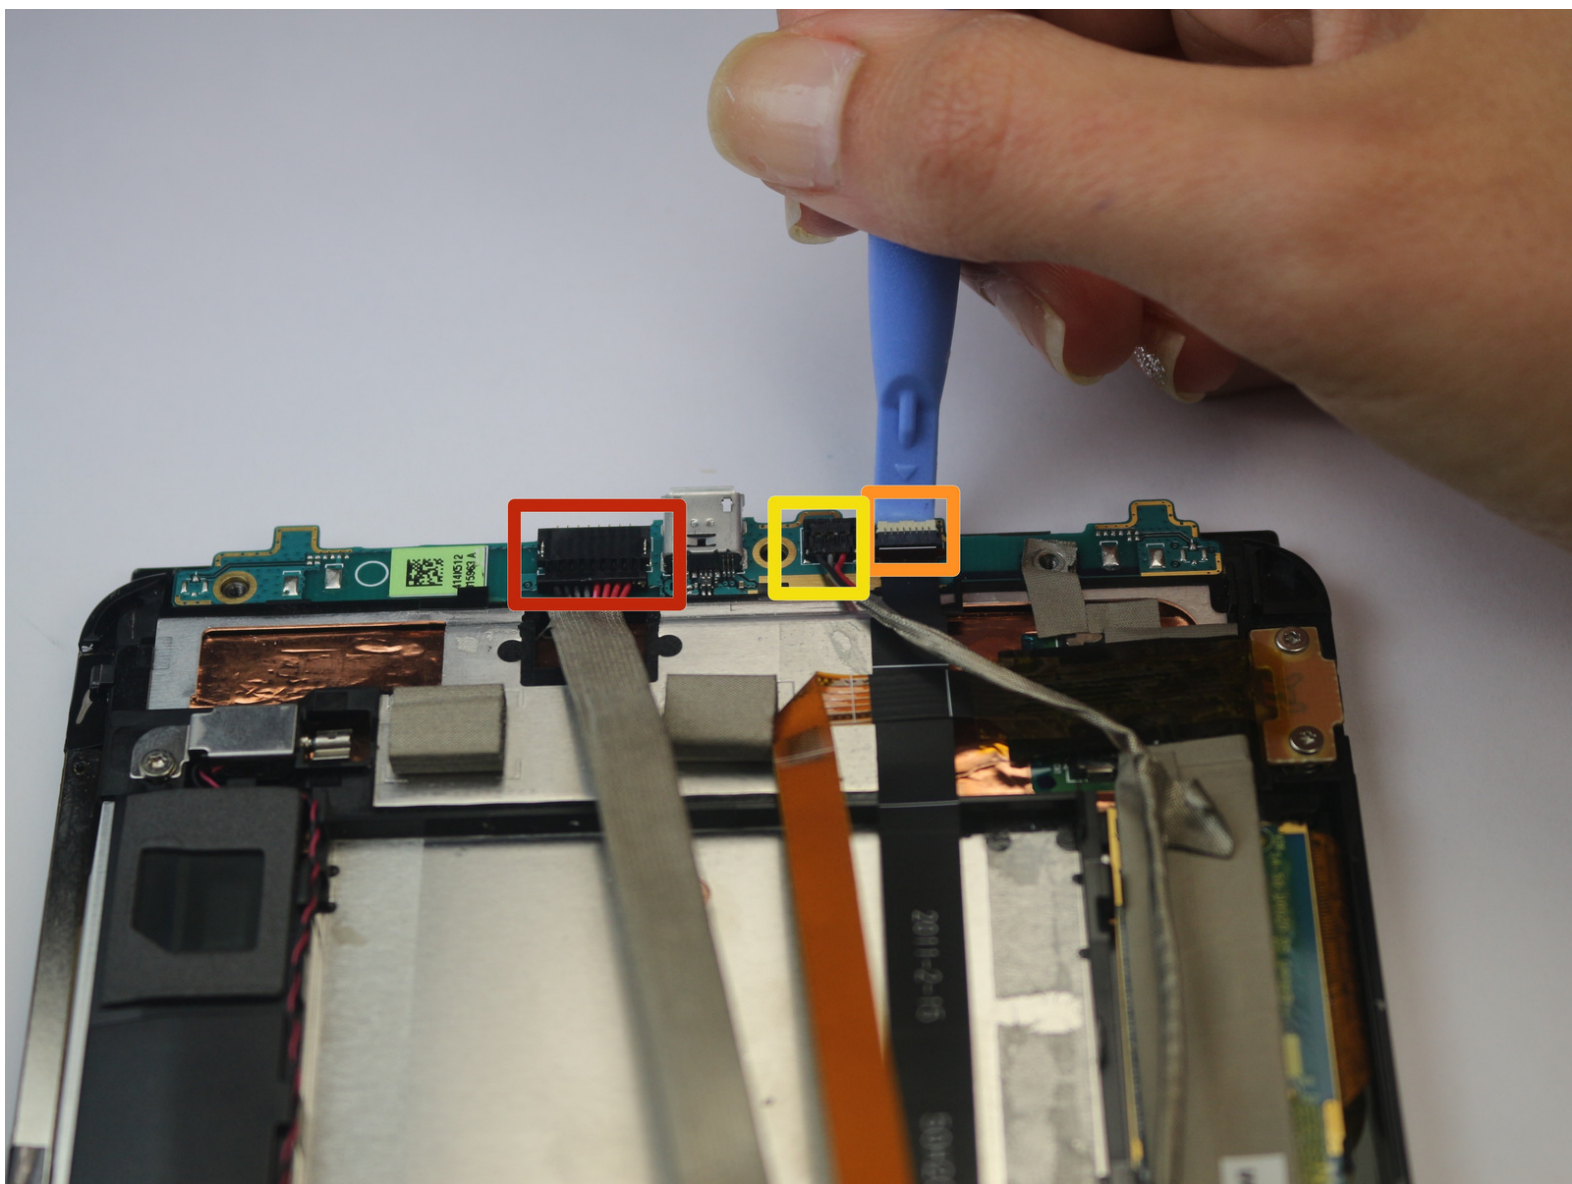



## TOOLS:

- [T5 Torx Screwdriver](#) (1)
  - [iFixit Opening Tools](#) (1)
-

## Step 1 — Removing the top panel



- Apply pressure along the bottom of the white panel containing the camera and push upwards.

**i** It may take some effort, but it will smoothly slide off.


## Step 2 — Removing the back panel



- Unscrew the four of 3.5mm Torx T5 screws that run along the sides of the exposed innards.

**i** All screws in the device will use the Torx T5 screwdriver, so keep it handy.


### Step 3 — Removing the inner protective panel

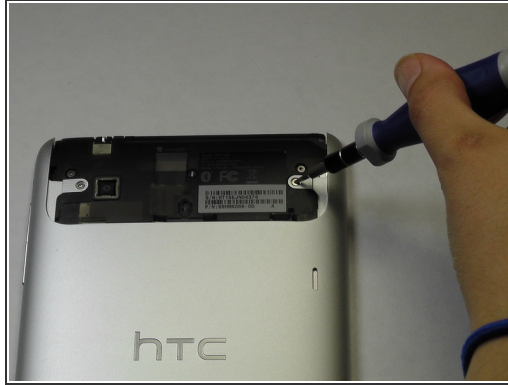

- Remove the black protective piece of plastic by sliding it upwards
  - Remove the two 3.5mm Torx screws holding the protective plastic down on along the sides.
- ⚠ A center 3.5mm Torx screw will be covered by "VOID" sticker. Be warned; removing this will void the device's warranty.
- Either remove the sticker or jam the screwdriver into the screw, and remove the screw.
  - Remove the protective panel by sliding it upwards.




## Step 4 — Removing the back plate

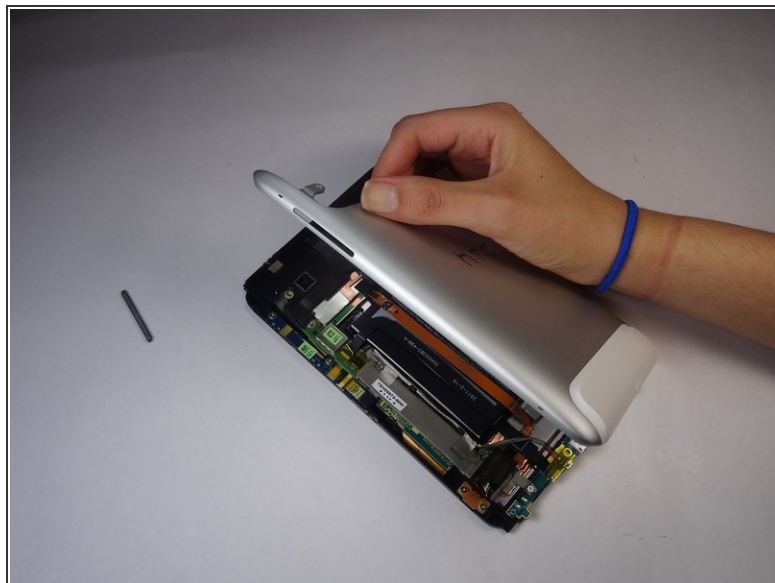

- Before removing the back cover, apply some scotch tape to the volume buttons to prevent them from falling out of the back panel
- Use a plastic removal device to lever up the top half of the cover.
- Lift the back panel up




## Step 5 — Rear Panel Tape Removal

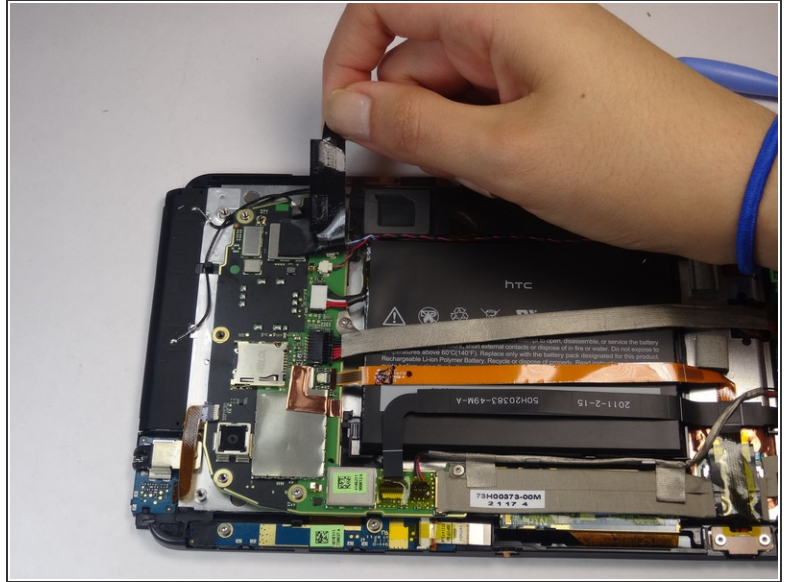

- Gently unfold the black tape along the top that covers the cable attachment points

**i** Leave the tape partially attached so that it can be easily re-attached

## Step 6

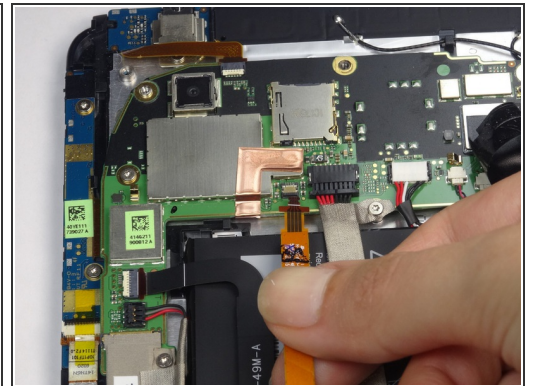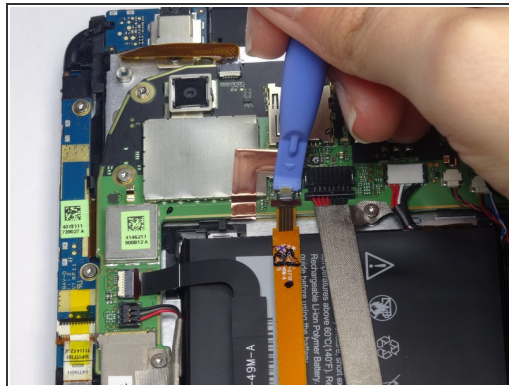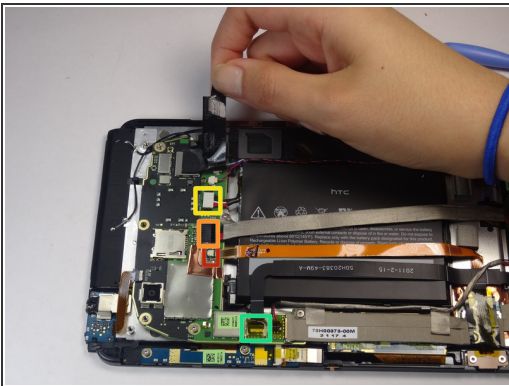

- Use the tip of a spudger as a lever to lift the white or black back piece to release the cable from the connection.
- Gently pull out the cable after releasing the back piece
- Repeat this step with the other three cable connections





## Step 7 — Battery Cable



- Remove the single 2.5mm Torx T5 screw holding the battery down along the top side


## Step 8 — Battery Removal

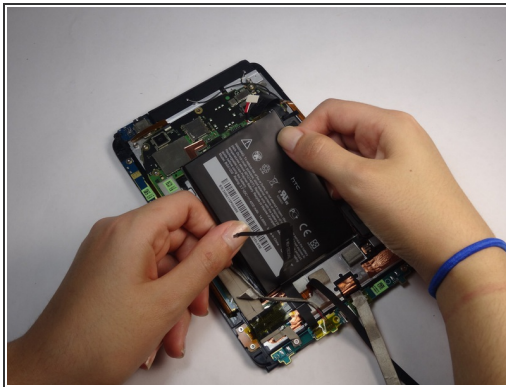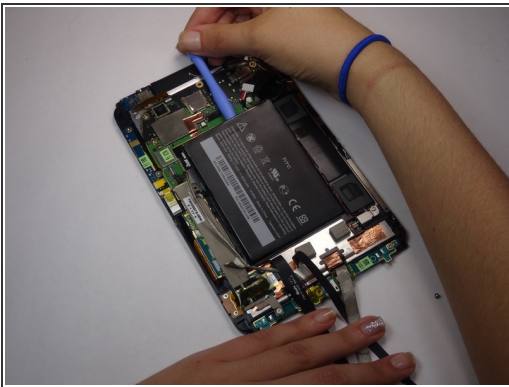

- Wedge the flat end of a spudger inbetween the battery and the front panel assembly
- Run the flat end of a spudger along the top edge of the battery to separate it from the adhesive securing it to the front panel assembly

⚠ If you encounter any resistance from the remaining adhesive, simply use the flat end of a spudger to remove the excess adhesive



## Step 9 — MicroUSB Port

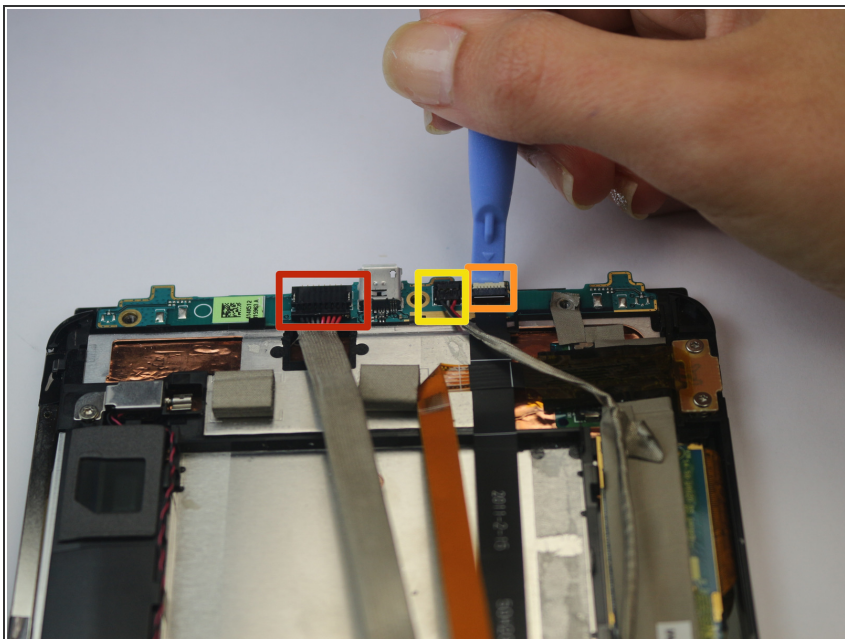

- Use a spudger to unclip the the wires attached to the power jack

ⓘ The clips have a white or black relief tab that, when pressed, releases the wires.



## Step 10

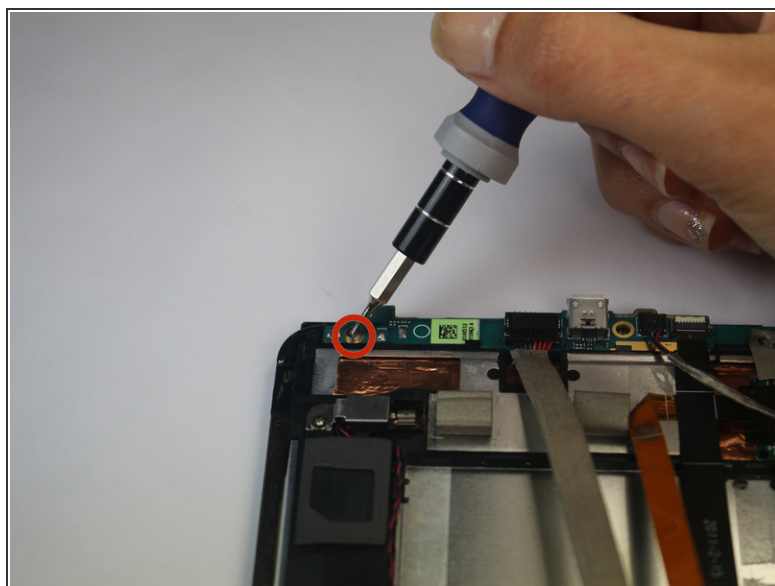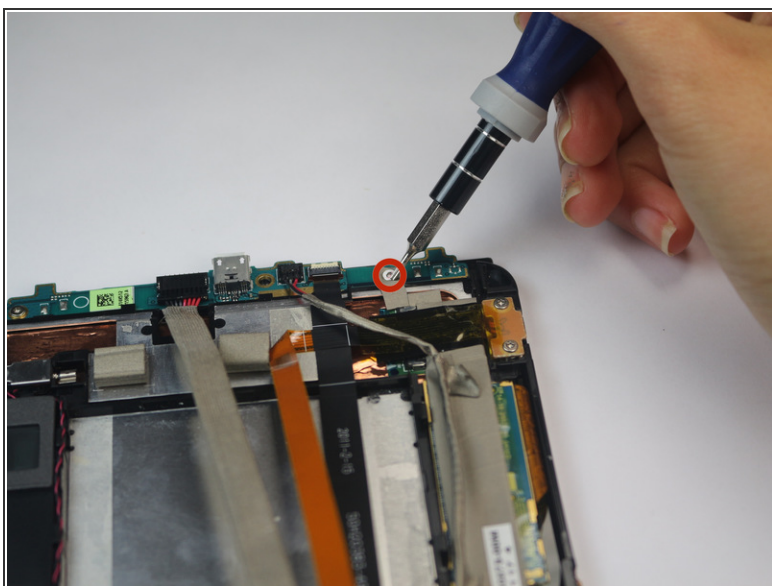

- Remove the two 2.5mm Torx T5 screws from both sides of the power jack panel.



## Step 11

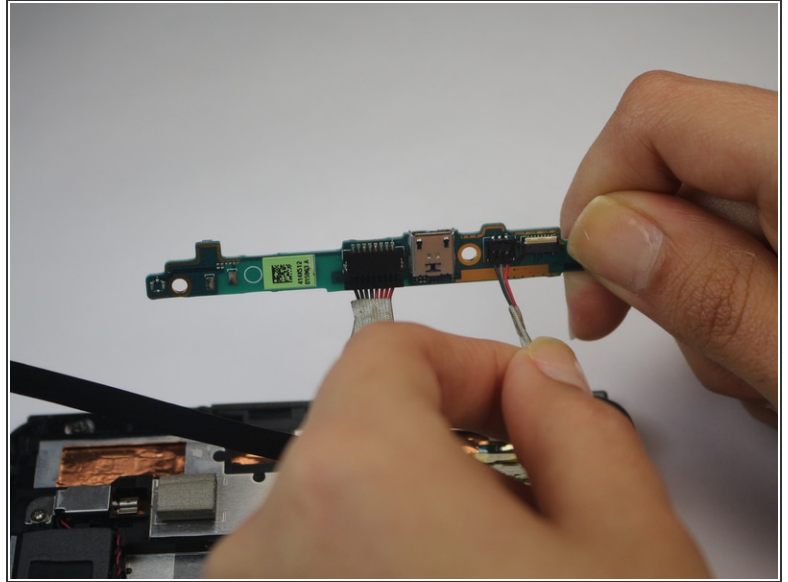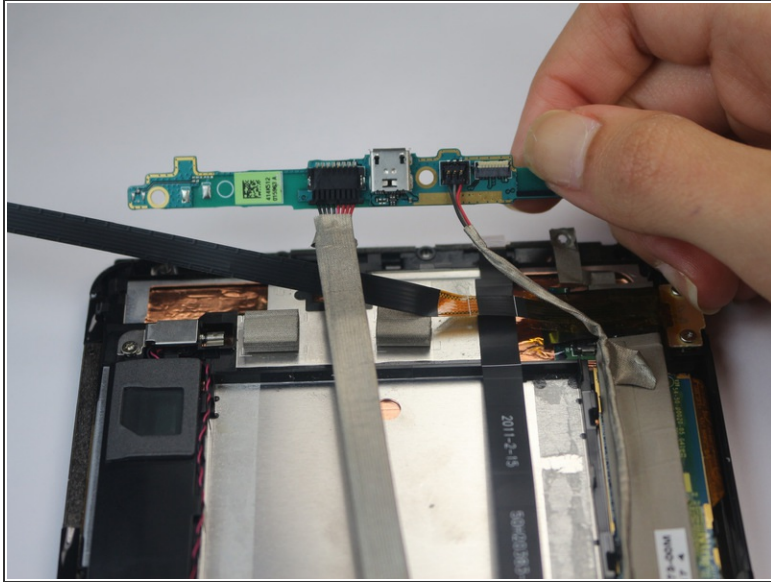

- Gently remove the power jack panel.

To reassemble your device, follow these instructions in reverse order.

This document was last generated on 2017-11-17 05:39:25 PM.